



The Belgrave Surround


Contents




Surround Shelf



2 X C Brackets




2 X M8 Bolts

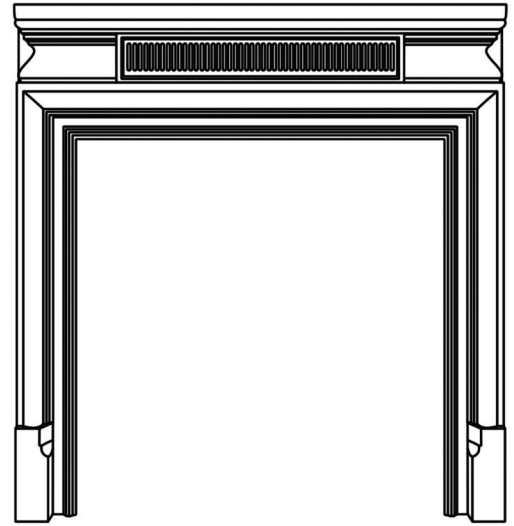


Surround

Please note, a flat head screwdriver is required to assemble this surround.

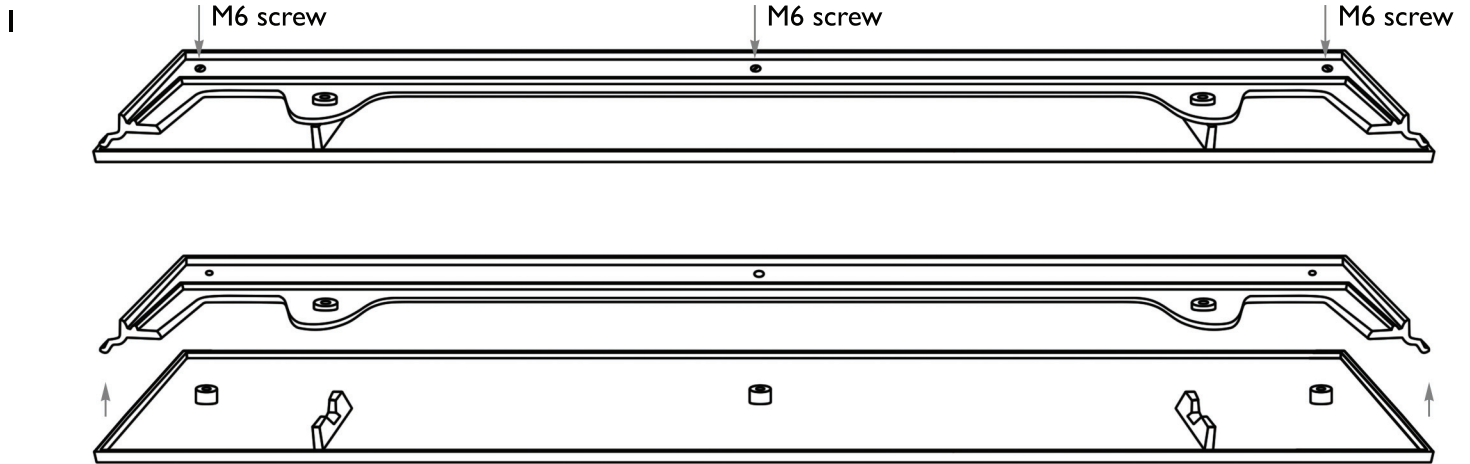

Lay the shelf on a flat surface with the top of the shelf facing down. To avoid damaging the finish, lay a soft cloth down first. Remove the 3 X M6 screws from the bottom of the shelf with a flat head screwdriver, do not discard the screws. Lift the bottom of the shelf away from the top of the shelf.

2

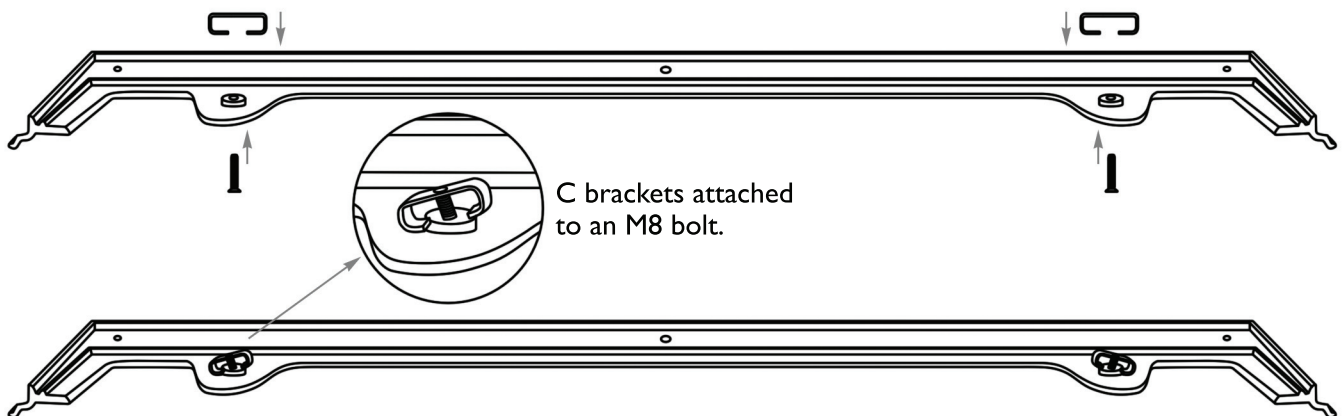


Pass the 2 X M8 bolts through the holes on the bottom of the shelf and then loosely attach the 2 X C brackets.




The Belgrave Surround

3

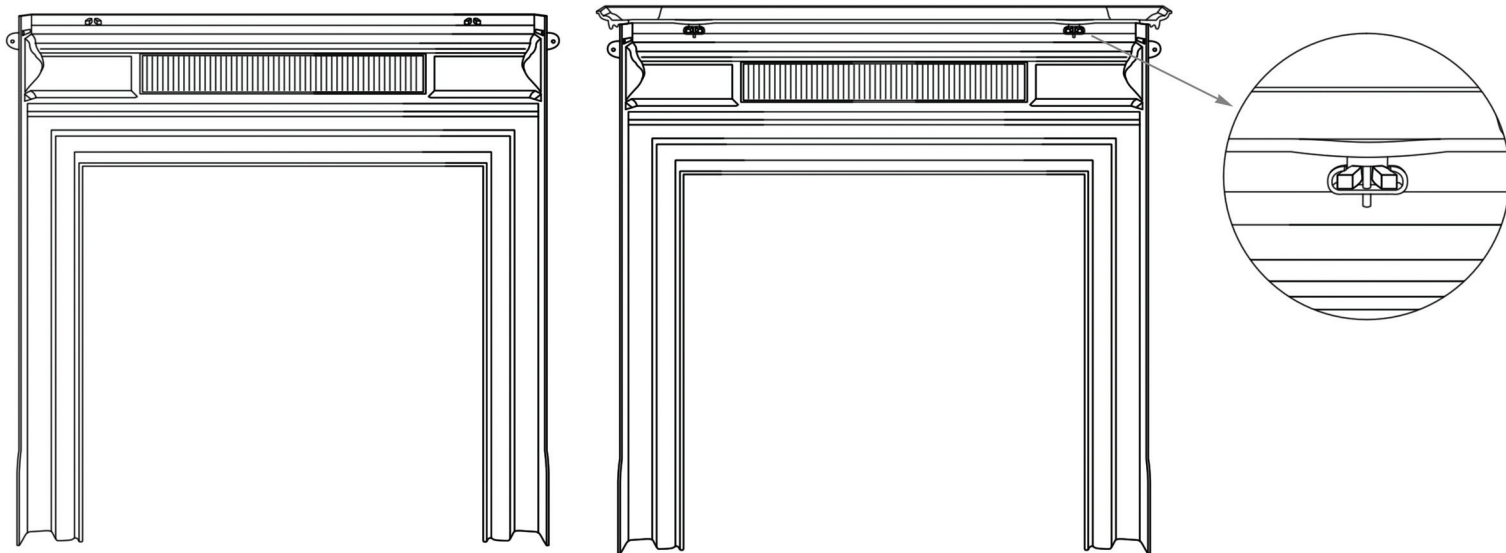

Attach the bottom of the shelf to the surround by placing the 2 X C brackets onto the fixing lugs. The 2 X M8 bolts should then be tightened.


4

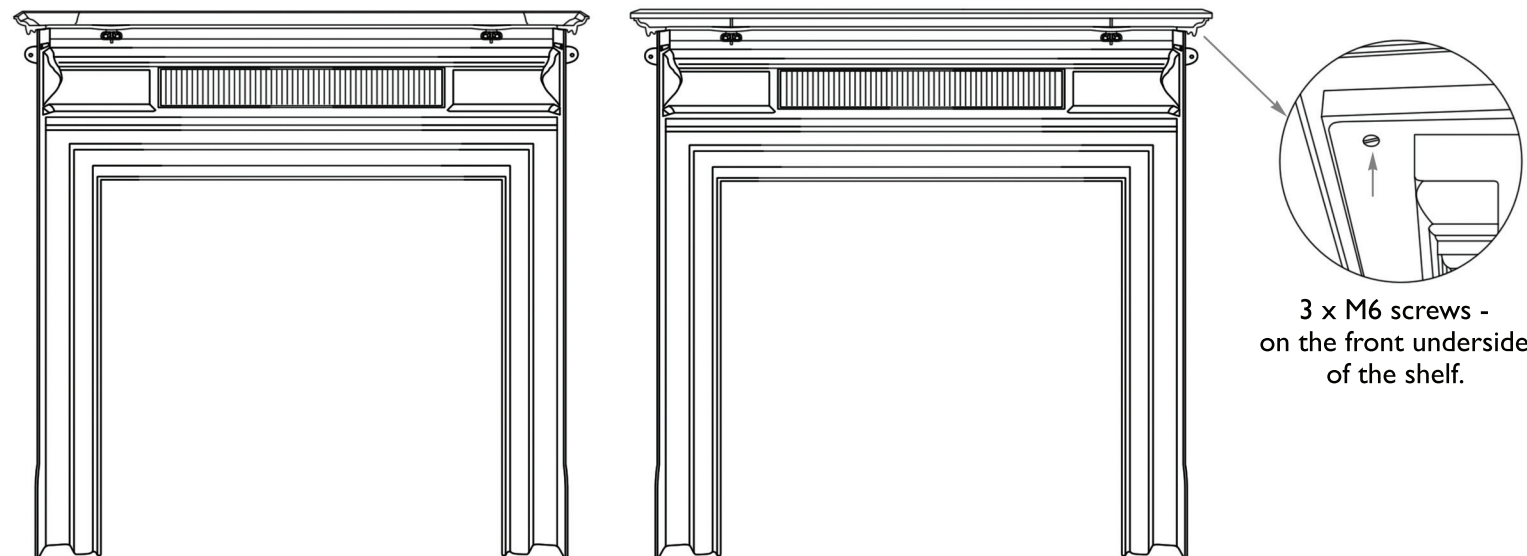

3 x M6 screws -
on the front underside
of the shelf.

Place the top of the shelf onto the bottom of the shelf, insert and tighten the 3 X M6 screws, that were removed in step 1.

5

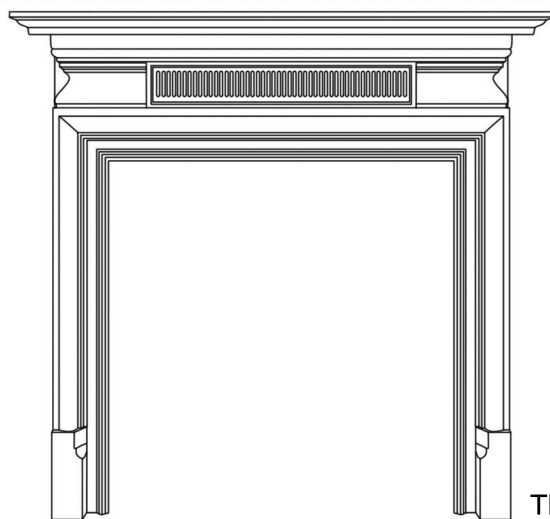

The surround is now complete.